



## ▶ play

### Listen to MP3/music

A/V SWITCH **3 C**

MONITOR/TV **PC**

STEREO **AUX**

**SERVER/MAC** Press Play in iTunes (spacebar)

### Use the server

A/V SWITCH **3 B**

MONITOR/TV **PC**

### Listen to iPod/iBook

A/V SWITCH **5 C**

STEREO **AUX**

### Watch a DVD

A/V SWITCH **1 A**

MONITOR/TV **V1**

STEREO **DVD**

### Listen to a CD

STEREO **DVD**

### Watch TV in stereo

A/V SWITCH **4 C**

MONITOR/TV **TV**

STEREO **AUX**

### Listen to AM/FM

STEREO Select radio station with remote control

### Watch a video tape

A/V SWITCH **2 A**

MONITOR/TV **V1**

STEREO **AUX**

## 📺 record

### Record from VCR

A/V SWITCH **2 D**

MONITOR/TV **PC**

**SERVER/MAC** Open VIDI, select Composite, press REC

### Record from DVD

A/V SWITCH **1 D**

MONITOR/TV **PC**

**SERVER/MAC** Open VIDI, select Composite, press REC

### Record audio stream

**SERVER/MAC** Open Audio Hijack Pro, select Source, press Hijack, Record

### Record TV show

**SERVER/MAC** Open VIDI, select Channel, press REC

## components

### SERVER/MAC

Apple PowerBook G4/550  
Mac OS X 10.3

### MONITOR/TV

Samsung SyncMaster 170MP  
17" LCD Monitor w/ TV Tuner

### STEREO & DVD/CD PLAYER

Sharp SD-AT50  
1-Bit Digital Home Theater

### FM TRANSMITTER

C. Crane,  
[www.ccrane.com/fm-transmitter.asp](http://www.ccrane.com/fm-transmitter.asp)

### FIREWIRE A/V CONVERTER

Formac Studio DV/TV  
[www.formac.com](http://www.formac.com)

### A/V SWITCH

two 5-position A/V switch selector boxes, outputs wired together